



KABA®

SIMPLEX® 7106 Series

Pushbutton Lock Installation Instructions

Important: Please keep these instructions. The combination of this lock has been factory preset: 2 and 4 pressed together, then 3.

WARNING

For your own safety, you must change the combination at the time of installation.

PLEASE READ AND FOLLOW ALL DIRECTIONS CAREFULLY

Since every installation is unique, carefully check windows, frame, door, etc. to ensure that the recommended procedures will not cause damage. KABA is not responsible for any damage caused by installation.

Tools Required

- 1/8" (3 mm) Drill Bit
 - 1/4" (6 mm) Drill Bit
 - 1" (25 mm) Wood Chisel
 - 3/4" (19 mm) Hole Saw
 - 1 3/8" (35 mm) Hole Saw
 - Phillips-head Screwdriver
 - 2 Pairs of Pliers
 - Hacksaw
 - Hammer
 - Center Punch
 - Drill (variable speed recommended)
-

Caution: Wear safety glasses when preparing door.

Table of Contents

Checklist4

Determining the Hand of Your Door4

A. Determining the Lock Location5

B. Marking the Door5

C. Drilling Holes in the Door6

D. Adjusting the Lock6

E. Installing the Lock7

F. Reversing the Latch8

G. Checking the Lock's Operation9

H. Verifying the Combination Change Assembly12

I. Installing the Strike12

J. Changing the Combination13

K. Instructions for Resetting an Unknown Combination15

L. Troubleshooting16

Templates (Center of Manual)





For technical assistance please call
1.800.849.TECH (8324) or 1.336.725.1331

CHECKLIST

Use this checklist to make sure that everything has been included.


- A** - Front lock
- B** - Inside combination change assembly
- C** - Reinforcing plate
- D** - Inside rim deadlocking latch
- E** - Strike box
- F** - Screw pack
 - a. Flat strike plate
 - b. Six 1 3/4" (44 mm) screws
 - 4 for inside rim deadlocking latch
 - 2 for strike box
 - c. Three 1" (25 mm) flat head strike screws
 - d. Two 2 3/4" (70 mm) round head break away reinforcing plate thru bolts
 - e. Two 3" (76 mm) flat head inside combination change assembly thru bolts
 - f. Two 2 3/8" (60 mm) flat head inside combination change assembly thru bolts
 - g. Two 2" (51 mm) flat head inside combination change assembly thru bolts
- Template (in center of booklet)

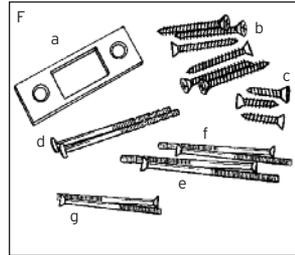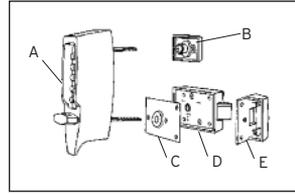

DETERMINE THE HAND OF YOUR DOOR

Many of the installation instructions refer to the handing of your door. The hand of the door is determined with the door in the closed position, from the exterior or pushbutton side of the door.

- A) Right Hand Door. Door opens inward (push). Hinged on the right side.
- B) Left Hand Door. Door opens inward (push). Hinged on the left side.
- C) Right Hand Reverse Door. Door opens outward (pull). Hinged on the right side.
- D) Left Hand Reverse Door. Door opens outward (pull). Hinged on the left side.

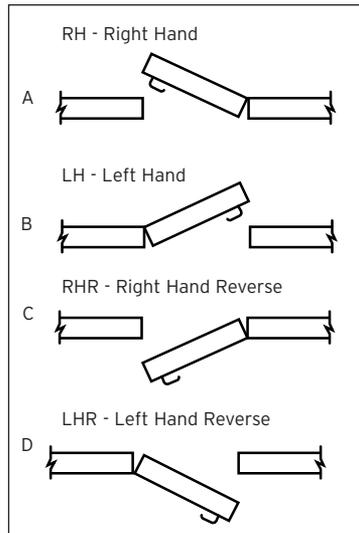

A. DETERMINING THE LOCK LOCATION

Install the lock with exterior thumbturn hole at least 7" (18 cm) above your primary lockset so it is comfortable to operate and not in the way when you turn the door knob (See Figure 1-1). Minimum stile width recommended: 4" (102 mm).

B. MARKING THE DOOR


B-1 Doors Opening Inward

- Fold the template (A) on the solid line (B).
- Tape the template securely to the inside of the door so that the fold is properly aligned with the edge of the door (See Figure 2-1).
- Use a center punch to mark the ten drilling points indicated on the template.
- Remove the template.


B-2 Doors Opening Outward

- Fold the template (A) on the dashed line (B).
- Tape the template securely to the inside of the door (C) so that the dashed line is aligned with the face of the door jamb (D) (See Figure 2-2).
- Use a center punch to mark the ten drilling points indicated on the template.
- Remove the template.


Note: You may install the strike (E) at this point. See Section I - Installing the Strike.

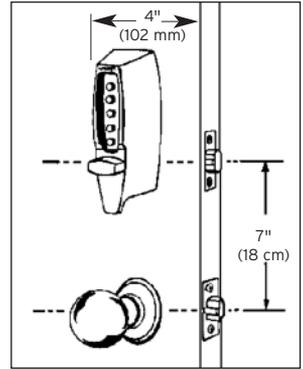

1-1

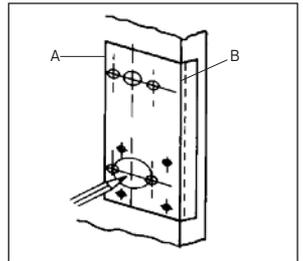

2-1

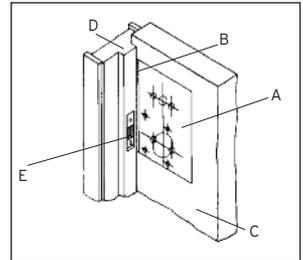

2-2

C. DRILLING HOLES IN THE DOOR

CAUTION: Positioning and drilling must be done straight to ensure trouble free operation of the model 7106 lockset. Improper drilling may result in excessive force being exerted on the lock which may result in the premature wearing of its mechanical parts.


Perform Step 1 first or it will be impossible to drill the four 1/4" (6 mm) holes.

C-1 Use a 1/4" (6 mm) drill bit to drill the four holes for the thru-bolts (**See A in Figure 3-1**). To prevent splintering the door or breaking the drill bit, begin drilling at a slow speed and increase the speed gradually until the tip of the drill bit emerges from the other side of the door. Repeat this procedure from the opposite side of the door.

C-2 Use a hole saw with a pilot bit to make the 1 3/8" (35 mm) hole (**B**). Apply pressure evenly until the circular blade cuts the first side of the door and the tip of the pilot bit emerges through the other side, then stop. Drill from the other side until the 1 3/8" (35 mm) hole (**B**) is completed.

C-3 Repeat Step C-2 for the 3/4" (19 mm) hole (**See C in Figure 3-1**).

C-4 Drill the four 1/8" (3 mm) holes **only** 3/4" (19 mm) deep (**See D in Figure 3-1**).

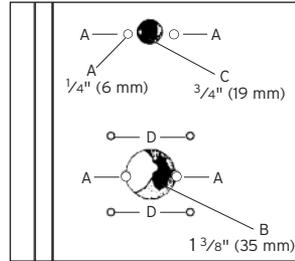

3-1


D. ADJUSTING THE LOCK

The lock has been pre-assembled to accommodate doors up to 2 1/4" (57 mm) thick. If your door is 1 3/8" to 2" (35 mm to 51 mm) thick, you must shorten both tailpieces **X** and **Y** (**See Figure 4-1**) and shorten the (**A**) Two thru-bolts used to secure the (**B**) combination change assembly.


D-1 Shorten the combination change tailpiece **X** according to your door thickness. Tailpiece **X** has been pre-marked for various door thicknesses for accuracy and convenience.

a) After determining the break line, hold the tailpiece firmly with a pair of pliers on the lock side of the tailpiece, just beside the desired break line.

b) With a second pair of pliers, grip the tailpiece at the other side of the line and bend it up and down until it breaks (**See Figure 4-2**).

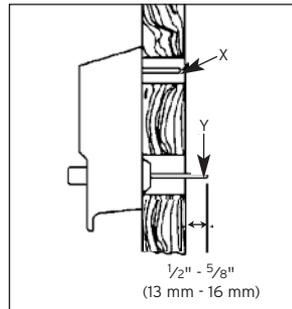

4-1

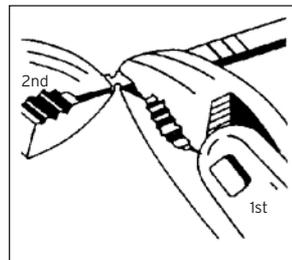


4-2

D-2 While holding the lockset firmly against the outside of the door, (**See Figure 4-1**) mark tailpiece **Y** at the point where it extends $\frac{1}{2}$ " - $\frac{5}{8}$ " beyond the interior surface of the door.


a) After determining the break line, hold the tailpiece firmly with a pair of pliers on the lock side of the tailpiece, just beside the desired break line.

b) With a second pair of pliers, grip the tailpiece at the other side of the line and bend it up and down until it breaks (**See Figure 4-2**).

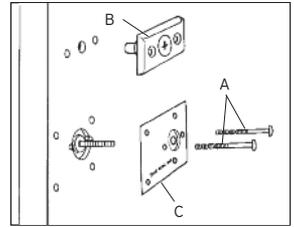

4-3

D-3 Shorten each of the two reinforcing plate thru-bolts (**A**) (**See Figure 4-3**) by gripping at the threaded end with pliers and sawing through at the correct length (**See Figure 4-4**) with a fine-tooth hacksaw.

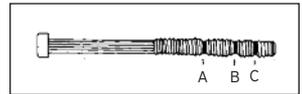

4-4

Note: Be careful not to damage the threads when shortening the thru-bolts.


- For $1\frac{3}{8}$ " (35 mm) thickness doors, shorten thru-bolt at **A**.
- For $1\frac{3}{4}$ " (45 mm) thickness doors, shorten thru-bolt at **B**.
- For 2" (51 mm) thickness doors, shorten thru-bolt at **C**.
- For $2\frac{1}{4}$ " (57 mm) thickness doors, leave thru-bolt as is.

D-4 To secure the (**B**) combination change assembly (**See "G" Figure 5-2**), utilize two 2" (51 mm) bolts (**H**) for door thickness $1\frac{3}{8}$ " (35 mm) to $1\frac{1}{2}$ " (38 mm). For door thickness $1\frac{1}{2}$ " (38 mm) - 2" (51 mm) utilize two $2\frac{3}{8}$ " (60 mm) bolts (**H**). For door thickness 2" (51 mm) - $2\frac{1}{4}$ " (57 mm), utilize two 3" (76 mm) thru-bolts (**H**).

E. INSTALLING THE LOCK


The model 7106 lock is packaged for an inward opening door. For an outward opening door, the latch must be reversed (**See Section F**).

Figures 5-1 (outside of door) and **5-2** (inside of door) show how the lock is installed and identify each component by letter. Refer to these figures as you follow the steps below.

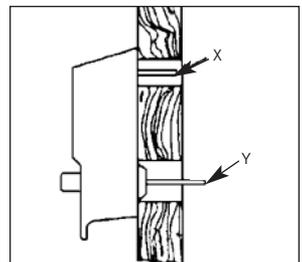

5-1

E-1 Insert tailpiece (**Y**) into the $1\frac{3}{8}$ " (35 mm) cutout (**A**) and the combination change tailpiece (**X**) into the $\frac{3}{4}$ " (19 mm) hole (**B**) (**See Figure 5-1 and 5-2**).

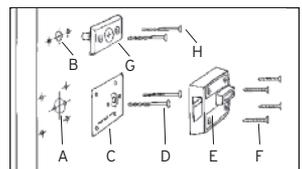

5-2

E-2 While holding the lock firmly against the outside of the door, use two round head thru-bolts (**D**) to secure the inside reinforcing plate (**C**). Finger tighten only.


E-3 Use a thin object **A** (screwdriver) to align tailpiece (**X**) with the horizontal slot of the combination change assembly (**G**) (See Figure 5-3). Attach the combination change assembly (**G**) with two flat head thru-bolts (**H**). Finger tighten only (See Figure 5-2).

E-4 Securely tighten the two thru-bolts (**D**) to reinforcing plate (**C**) (See Figure 5-2).


E-5 Position the cam on the inside rim deadlocking (See Figure 5-4). Turn cam to the right (clockwise) manually until it stops.

E-6 Mount the inside rim deadlocking latch (**E**) so that tailpiece **Y** is engaged in the vertical position. Secure evenly with four screws (**F**). (See Figure 5-2).


E-7 Lightly push the combination change assembly down and secure screws evenly (See Figure 5-5).

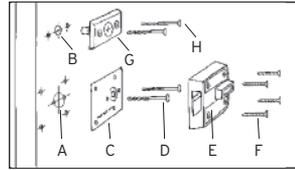


5-2

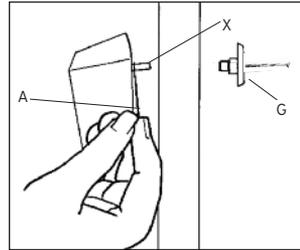

5-3

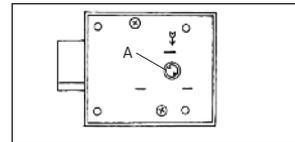

5-4

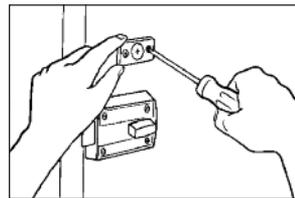

5-5

F. REVERSING THE LATCH


The model 7106 lock is packaged for an inward opening door. For an outward opening door, the latch must be reversed.

F-1 With the latch extended (**A**), remove the two backplate screws from the underside of the inside rim deadlocking latch. Remove the backplate using a small flat blade screwdriver.

F-2 Carefully remove the latch spring (**B**) and auxiliary latch spring (**C**) with a small flat blade screwdriver.


F-3 Press the latch and auxiliary latch (**D**) into the case to the stop position (See Figure 6-1).

F-4 Lift the auxiliary latch up and out. Reverse the auxiliary latch bevel and place it back into the case. Hold the auxiliary latch down and slide it forward so it will project $\frac{3}{8}$ " (10 mm) beyond the case front and hold the auxiliary latch lever (**E**) out of the way.

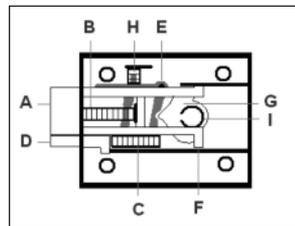

6-1

F-5 While holding the auxiliary latch as instructed in step 4, place the latch in the case with the bevel in the same direction as the auxiliary latch. Make sure the latch legs (F) are caught on the ears of the turn knob lever (G) (See **Figure 6-2**).

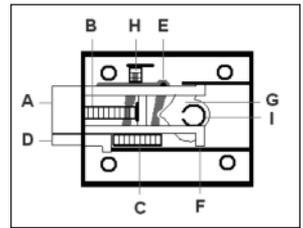


6-2

F-6 Push the latch and auxiliary latch forward to the stop position so that they are fully extended (See **Figure 6-2**). Insert the latch spring (H) (large opening of spring) towards back of latch and the (small opening of spring) against the spring seat. Insert one end of the auxiliary latch spring into the back of the auxiliary latch and place the other end of the spring against the spring seat.

F-7 When the springs are installed, the auxiliary latch lever (shaded area in **Figure 6-2**) should be in the position shown in **Figure 6-2**.

F-8 If the cam (I) falls out, replace it in the thumbturn hole with the circular opening facing up. Place the backplate onto the case with the letters facing up towards you, and fasten with two screws removed in step 1 (See **Figure 6-3**). Check the lock for freedom of movement by depressing the latch and auxiliary latch into the lock case, then make sure that the latch and auxiliary latch return back to their original fully extended position (See **Figure 6-3**).

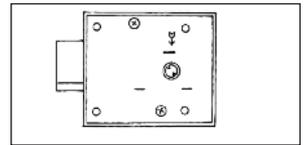


6-3

To Install the Lock, See Section E

G. CHECKING THE LOCK'S OPERATION


Important: The following steps must be performed while the door is open.

G-1 Turn the outside thumbturn to the left (counterclockwise) until it stops, then release it (See **Figure 7-1**).

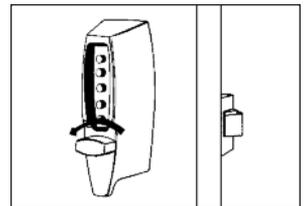

7-1

G-2 Press the preset factory combination (2 and 4 pressed together, release, then 3, and release) (See **Figure 7-2**). A distinctive click must be felt to indicate that the buttons have been correctly depressed.

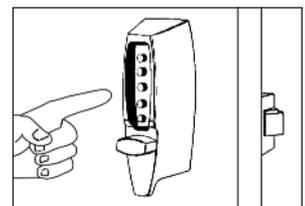

7-2

KABA SIMPLEX® LIMITED WARRANTY

Kaba Access Control warrants this product to be free from defects in material and workmanship under normal use and service for a period of one (1) year. Kaba Access Control will repair or replace, at our discretion, locks found by Kaba Access Control analysis to be defective during this period. Our only liability, whether in tort or in contract, under this warranty is to repair or replace products that are returned to Kaba Access Control within the one (1) year warranty period.

This warranty is in lieu of and not in addition to any other warranty or condition, express or implied, including without limitation merchantability, fitness for purpose or absence of latent defects.

ATTENTION: This warranty does not cover problems arising out of improper installation, neglect or misuse. All warranties implied or written will be null and void if the lock is not installed properly and/or if any supplied component part is substituted with a foreign part. If the lock is used with a wall bumper, the warranty is null and void. If a doorstop is required, we recommend the use of a floor secured stop.


The environment and conditions of use determine the life of finishes on Kaba Access Control products. Finishes on Kaba Access Control products are subject to change due to wear and environmental corrosion. Kaba Access Control cannot be held responsible for the deterioration of finishes.

Authorization to Return Goods


Returned merchandise will not be accepted without prior approval. Approvals and Returned Goods Authorization Numbers (RGA Numbers) are available through our Customer Service department in Winston-Salem, NC 1.800.849.8324. **The serial number of a lock is required to obtain this RGA Number.** The issuance of an RGA does not imply that a credit or replacement will be issued.

The RGA number must be included on the address label when material is returned to the factory. All component parts including latches and strikes (even if not inoperative) must be included in the package with return. All merchandise must be returned prepaid and properly packaged to the address indicated.

Top

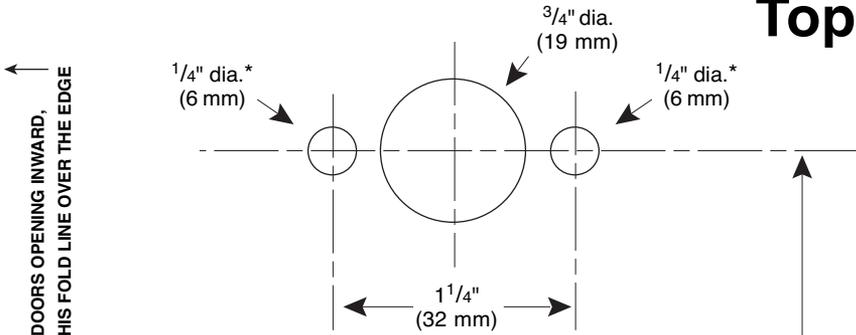


***IMPORTANT**
Drill the four 1/4"
(6 mm) dia. holes
before all other holes.

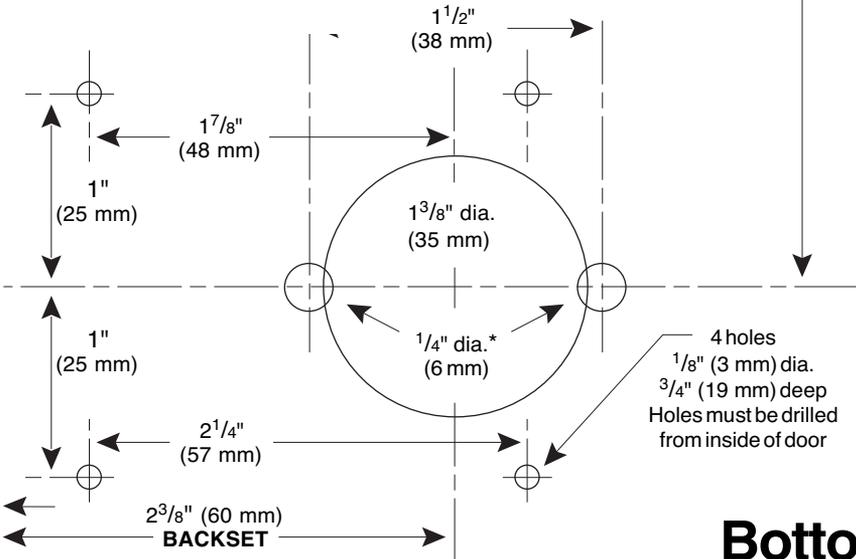

Bottom

REFERENCE ONLY, NOT TO SCALE
DO NOT USE AS A DRILLING TEMPLATE
CALL 800-849-8324

Top

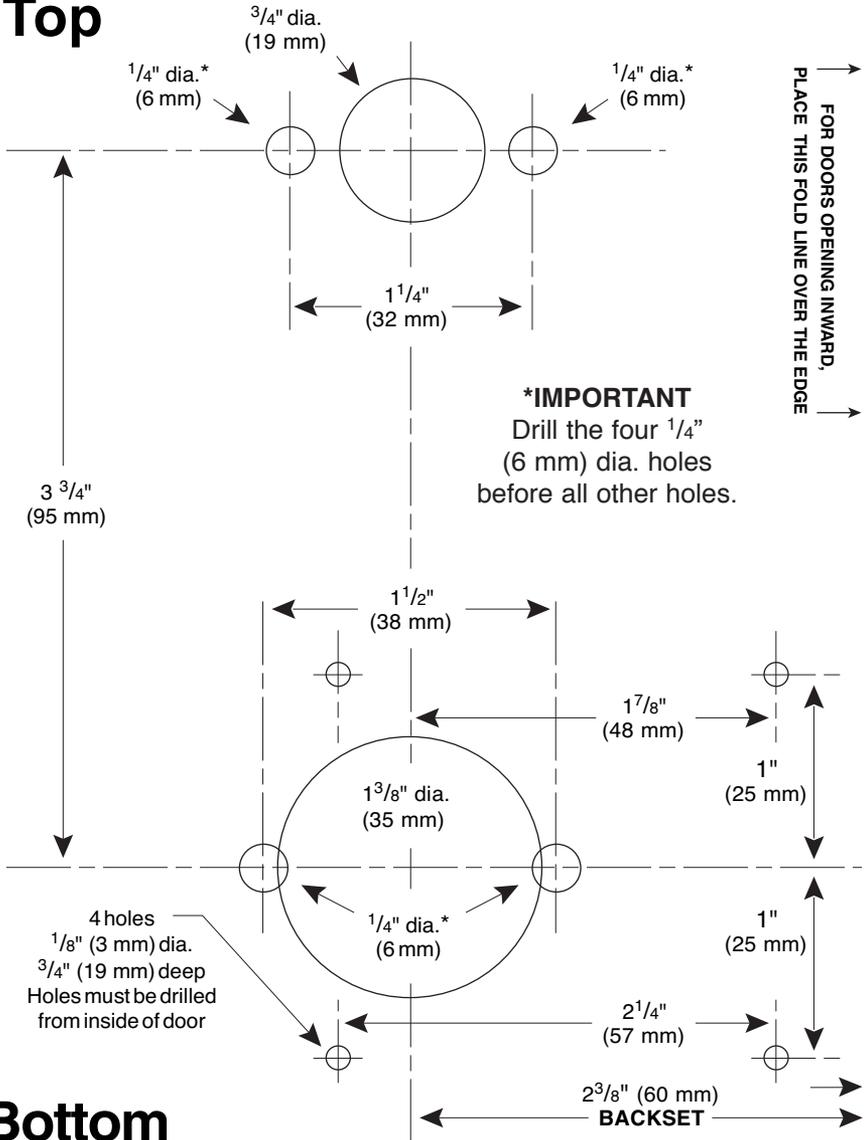


Bottom

REFERENCE ONLY, NOT TO SCALE
DO NOT USE AS A DRILLING TEMPLATE
CALL 800-849-8324

PKG 1294 0307

CAUTION

Apply template and drill from the inside but compensate for door bevel if any

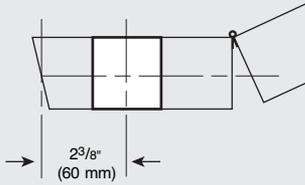

NOTE: Lock will accommodate doors $1\frac{3}{8}"$ (35 mm) to $2\frac{1}{4}"$ (57 mm) thick. Suitable reinforcement shall be provided by the hollow metal door manufacturer to prevent collapsing of door. When door silencers are to be installed, proper allowances must be made for strike location.

FOR DOORS OPENING OUTWARD,
PLACE THIS FOLD LINE IN LINE WITH FACE OF DOOR JAMB

7106 TEMPLATE

RIGHT HAND DOOR

MARK ACCURATELY
BORE STRAIGHT

Place this template on the
INTERIOR SIDE OF THE DOOR
using the correct fold line for
door edge for door opening
inward or outward.

$\frac{3}{32}"$
(2 mm)


BE SURE THE FOLD IS EXACTLY ON THE LINE



PKG1294_0307

CAUTION

Apply template and drill from the inside but compensate for door bevel if any

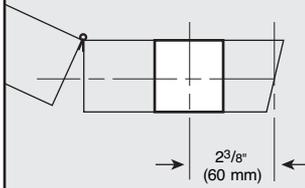

NOTE: Lock will accommodate doors $1\frac{3}{8}"$ (35 mm) to $2\frac{1}{4}"$ (57 mm) thick. Suitable reinforcement shall be provided by the hollow metal door manufacturer to prevent collapsing of door. When door silencers are to be installed, proper allowances must be made for strike location.

→
FOR DOORS OPENING OUTWARD,
→
PLACE THIS FOLD LINE IN LINE WITH FACE OF DOOR JAMB


7106 TEMPLATE LEFT HAND DOOR

MARK ACCURATELY
BORE STRAIGHT


Place this template on the
INTERIOR SIDE OF THE DOOR
using the correct fold line for
door edge for door opening
inward or outward.

BE SURE THE FOLD IS EXACTLY ON THE LINE

$\frac{3}{32}"$ →
(2 mm)

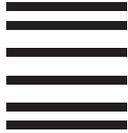

NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

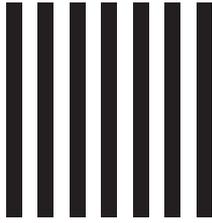

BUSINESS REPLY MAIL

FIRST-CLASS MAIL

PERMIT NO. 1563

WINSTON-SALEM, NC

POSTAGE WILL BE PAID BY ADDRESSEE

KABA ACCESS CONTROL
2941 INDIANA AVENUE
WINSTON-SALEM, NC 27199-3770



REGISTRATION CARD

Thank you for purchasing our product. In order to protect your investment and to enable us to better serve you in the future, please fill out this registration card and return it to Kaba Access Control, or register online at www.kabaaccess.com.

Name _____

Position _____

Company _____

Address _____

City _____

State _____ ZIP (Postal Code) _____ Country _____

Phone _____

Email _____

Name of Dealer Purchased From _____

Date of Purchase _____

Lock Model Number _____

This lock will be used in what type of facility?

- | | | |
|--|---|---|
| <input type="checkbox"/> Commercial Building | <input type="checkbox"/> Industrial/Manufacturing | <input type="checkbox"/> Airport |
| <input type="checkbox"/> College/University | <input type="checkbox"/> Government/Military | <input type="checkbox"/> School/Educational |
| <input type="checkbox"/> Hospital/Healthcare | <input type="checkbox"/> Other (please specify) _____ | |

What area is being secured with this lock? (e.g. Front Door, Common Door, Exercise Room)

This lock is:

- New Installation
- Replacing a conventional keyed lock
- Replacing a Kaba Mechanical Pushbutton Lock
- Replacing a Kaba Electronic Access Control
- Replacing a keyless Lock other than Kaba

How did you learn about Kaba Access Control Pushbutton Locks?

- | | | | |
|--|---------------------------------------|---|---|
| <input type="checkbox"/> Advertisement | <input type="checkbox"/> Previous Use | <input type="checkbox"/> Internet/Web | <input type="checkbox"/> Another Use |
| <input type="checkbox"/> Locksmith | <input type="checkbox"/> Maintenance | <input type="checkbox"/> Training Class | <input type="checkbox"/> Other (please specify) |

What was your reason for buying this lock? _____

Who installed your lock?

- | | | |
|------------------------------------|--------------------------------------|--------------------------------------|
| <input type="checkbox"/> Locksmith | <input type="checkbox"/> Maintenance | <input type="checkbox"/> Other _____ |
|------------------------------------|--------------------------------------|--------------------------------------|

Check here if you would like more information on Kaba Access Control locks.

G-3 Turn the outside thumbturn to the right (clockwise) until it stops (**See Figure 7-3**); the latch should retract fully. If the latch does not retract, turn the thumbturn to the left counterclockwise until it stops, release, and repeat Step G-2.

Note: From the outside, the only way to retract the latch is to turn the thumbturn clockwise.

G-4 Release the outside thumbturn. The latch should return to its completely extended position.


G-5 Turn the inside thumbturn to the left (counterclockwise) until it stops; the latch will retract. Release it and the latch will return to its completely extended position

(**See Figure 7-4**).


Note: The inside thumbturn may be turned to the right (clockwise) to keep the latch retracted. Turn the thumbturn to the left to bring the latch back to its normal extended position.

G-6 If the latch does not retract completely, unscrew the four screws (**F**) (**See Figure 7-4 and 7-5**) and remove the latch. Loosen the two thru-bolts (**D**) on the reinforcing plate (**See Figure 7-5**). Move the plate up or down, tighten the thru-bolts (**D**), and remount the latch with the four screws (**F**). Check the latch's retraction again and repeat this operation as needed, until the latch completely retracts.


If the latch will not extend and retract freely after performing the above operation, loosen the two thru-bolts (**H**) of the combination change assembly (**G**) (**See Figure 7-5**), move the lock up or down, tighten the thru-bolts (**H**), and try to retract the latch again.

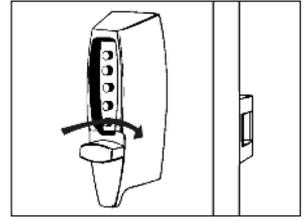

7-3

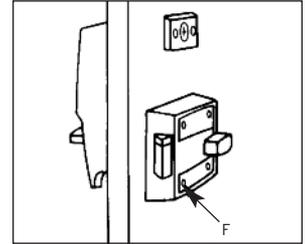


7-4

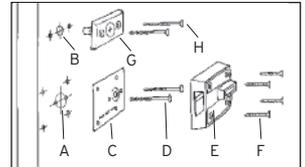

7-5

H. VERIFYING THE COMBINATION CHANGE ASSEMBLY

- H-1** Insert the tip of a Phillips-head screwdriver into the central piece of the combination change assembly (**See Figure 8-1**).
- H-2** Lightly rotate the screwdriver to the right (clockwise) until it stops.
DO NOT FORCE.
- H-3** Remove the screwdriver; the central piece should automatically return to its initial position.
- H-4** If the central piece jams and does not return to its initial position, loosen the two thru-bolts (**H**) (**See Figure 8-1**) and push the combination change assembly (**A**) upward. Tighten the thru-bolts, and repeat Steps H-1 to H-3.

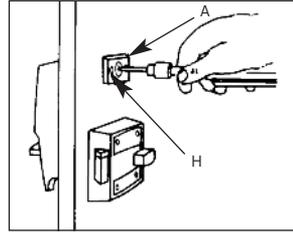


8-1

I. INSTALLING THE STRIKE

I-1 Outward opening door - mount flat strike


- Place the strike (**A**) on the door jamb (**B**) in line with the center line of latch (**See Figure 9-1**).
- Trace the outline of the strike on the jamb. Remove the strike.
- Chisel out the jamb so that the strike will be flush with the surface of the jamb.
- Place the strike back into the cutout and trace the latch hole on the jamb.
- Chisel this out to clear the $\frac{5}{8}$ " (16 mm) long extended latch. The latch must enter the strike freely.

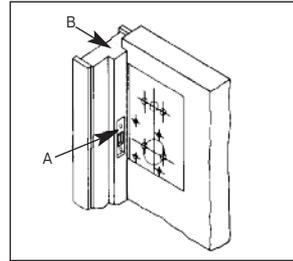

9-1


I-2 Inward opening door - mount box strike

- Place the strike on the door trim in line with the center line of latch.
- Trace the outline of the strike onto the door trim (**See Figure 9-2**). Add $\frac{5}{32}$ " (4 mm) to the edge of the tracing opposite the lock to allow for recessing of the strike tongue.
- Chisel out the traced (shaded area), down to the door frame (**See Figure 9-2**).

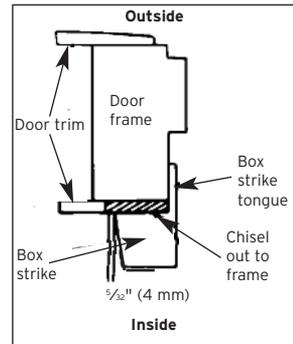

9-2

- d. Place the strike back into this cutout and trace the outline of the strike tongue (See **Figure 9-3**).
- e. Chisel out the frame so that the strike tongue will be flush (approximately $\frac{5}{32}$ ").
- f. Place the strike back into the cutout and check that the large segment of the latch enters the strike freely.
- g. Secure the strike in the end with two $1\frac{3}{4}$ " (44 mm) screws and on the flat area with three 1" (25 mm) screws provided.

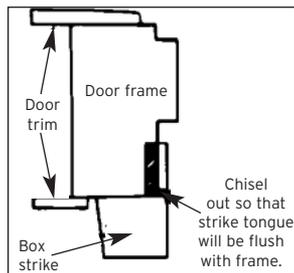

9-3

J. CHANGING THE COMBINATION

Important: The following steps must be performed while the **DOOR IS OPEN**.

The factory pre-set combination is 2 and 4 pressed simultaneously, then 3.

Read the instructions through once before attempting to change the combination.

J-1 Turn the outside thumbturn to the left (counterclockwise) until it stops (See **Figure 10-1**) then return it clockwise slowly to the horizontal position and release.


J-2 Enter the current combination (See **Figure 10-2**).

J-3 Insert a Phillips-head screwdriver into the central piece of the combination change assembly (See **Figure 10-3**). Gently rotate the screwdriver to the right (clockwise) until it stops. A slight click should be felt. **DO NOT FORCE**.


J-4 Remove the screwdriver from the combination change assembly.

Important: When removing the screwdriver, the central piece must return to its initial position, if not, set it back to its original position using the screwdriver (See **Figure 10-3**). If the central piece of the combination change assembly does not return to its original position, the combination will be cancelled and the lock will jam.


J-5 Turn the outside thumbturn left (counterclockwise) until it stops (See **Figure 10-4**) and return it slowly clockwise to the horizontal position and release.

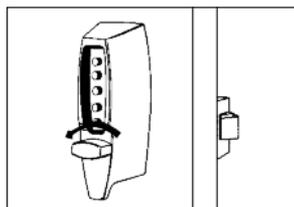


10-1

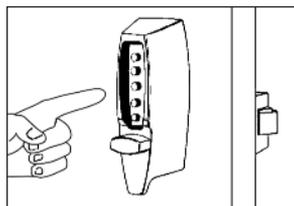

10-2

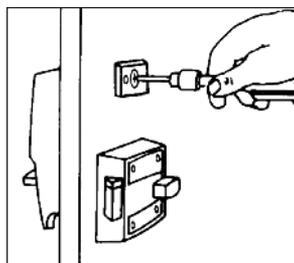


10-3

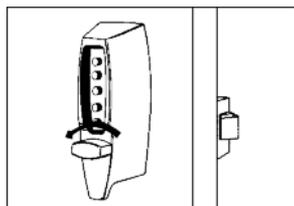

10-4


J-6 Select a new combination and write it down (some or all of the buttons may be used for your new combination, pressed individually or simultaneously). Each button may be used only once. We do not recommend the use of a one button combination.

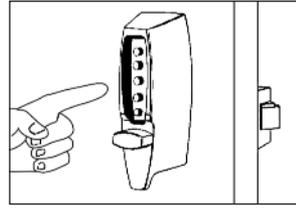

10-5

J-7 With the **door open**, enter your new combination (**See Figure 10-5**). Depress each button in the new combination fully and release it. You must feel a click each time you press a button to know that the button was fully depressed.

J-8 Turn the outside thumbturn to the right (clockwise) (**See Figure 10-6**) until it stops; the latch should retract.

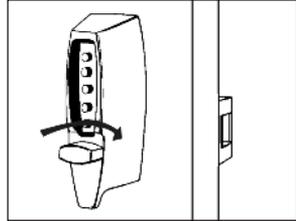

10-6

J-9 Release the outside thumbturn; the latch should return to the completely extended position.

Keep the door open and test the operation of the lock to assure your combination was set correctly.

Operating the lock: Repeat 2-3 times to ensure trouble-free operation with the new combination.

J-10 Turn the outside thumbturn to the left (counterclockwise) to "clear."

J-11 Enter the combination. Depress each button in the combination fully and release it. You must feel a click each time you press a button to know that it was fully depressed.

J-12 Turn the outside thumbturn to the right (clockwise). The latch should retract.

Tests:

- 1) Try to operate the lock without entering a combination. The thumbturn should not turn to the right (clockwise), retracting the latch. If it does turn, retracting the latch, the new combination was not properly set. Set a new combination by following steps J-1 to J-9, omitting step J-2.
- 2) Try to operate the lock by entering a wrong combination. The thumbturn should not turn to the right (clockwise), retracting the latch.


Note: If force resistant clutch is actuated, you will feel a hard click in the outside thumbturn. The lock is designed to do this. The latch still should not retract even though the force resistant clutch was actuated. Keep turning the outside thumbturn and it will reset in the original position.

K. INSTRUCTIONS FOR RESETTING AN UNKNOWN COMBINATION

Remove the lock from the door. Loosen and remove the 4 screws that hold the back plate on the lock body. Set aside the back plate assuring the tailpieces do not come loose/out of the backplate. Remove the drive cam assembly located on the control shaft on the back of the chamber. Remove the combination chamber from the lock held by 2 screws.

To remove the 3-sided dust cover marked "Kaba Simplex," place the combination chamber in the position below to the right.

K-1 Place a small screwdriver on the edge of the 3-sided dust cover and push down on the screwdriver (See **Figure 11-1**). The cover should pop loose. Once it does, pull the cover off of the combination chamber.

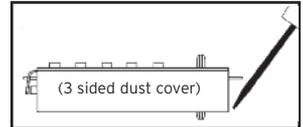


K-2 Hold the chamber in one hand by the screw tabs (b) on each end with the key-stems (c) facing you and the control shaft (d) at the bottom (See **Figure 11-2**).

11-1

K-3 Using pliers or equivalent, rotate the control shaft (d) counterclockwise and release to clear the chamber (See **Figure 11-2**).

K-4 Look at the 5 code gears (e). If any code gear pockets (f) are already at the shear line (open position), ignore them. They are not used in the combination (See **Figure 11-3**).

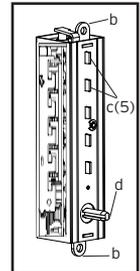

11-2

NOTE: Shear line (open position) references the "L" shaped feet already align with the mating gear pocket (f)

K-5 Find the code gear pocket/s (e) that is farthest away from the shear line (open position). Depress that key-stem/s (c) and release (See **Figure 11-3**). If any digits in the combination were depressed together (at the same time), then they must also be depressed together to reset the combination.

K-6 Find the code gear pocket/s (e) that is the next farthest away from the shear line (open position). Depress that keystems (c) and release (See **Figure 11-3**).


NOTE: If any of the code gear pockets travel past the shear line (open position), the key stems have been depressed in the wrong sequence. Start over at K-3.

K-7 Repeat step K-6 until all code gear pockets (e) are at the shear line (open position).

K-8 If all the code gear pockets (e) are not lined up at the shear line (open position), start over at step K-3.

K-9 Depress the lockout slide (g) at the top of the chamber and release. (looks like one end of a spark plug) (See **Figure 11-3**).

K-10 Using pliers or equivalent, rotate the control shaft (d) counterclockwise to clear the chamber and release. The lockout slide (g) should pop out (button underneath will stay depressed) (See **Figure 11-3**).

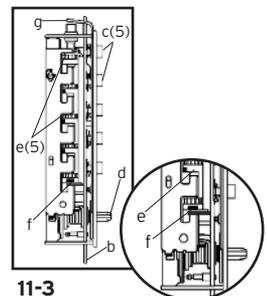


11-3

K-11 Depress the key-stem/s (**c**) that you want in the new combination, releasing each after it is depressed (**See Figure 11-4**).

K-12 Once all the digits in the new combination have been depressed, using pliers or equivalent, rotate the control shaft (**d**) clockwise (**See Figure 11-4**). The code change button (**h**) underneath the lockout slide (**g**), should pop up (**See Figure 11-4**). The new combination is now set.

K-13 Look at the code gear pockets (**e**). The numbers in the new combination should not be at the shear line (open position) (**See Figure 11-4**). If all look like (f), start over at Step K-3.

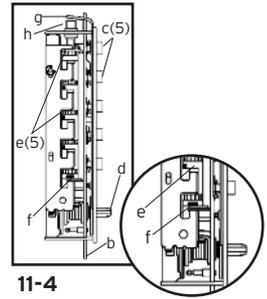

11-4

Reinstallation: Replace the 3-sided dust cover marked "Kaba Simplex." Make sure the staked joints on both end plates fit through the slots on the dust cover. Stake the 2 end plate joints. Replace the combination chamber into the lock using the same 2 screws removed earlier. Slip the drive cam assembly back on the control shaft of the chamber assuring it is in the same position as prior to removal. Re-secure the back plate, assuring the tailpieces are seated correctly using the same 4 screws removed earlier. Reinstall the lock back on the door.

Testing: Enter the combination set during the reset process. Turn the outside thumbturn to the right (clockwise). The latch should retract. If the latch does not retract, turn the outside thumbturn left (counterclockwise) and release, then enter the code again.

L. TROUBLESHOOTING

- ? Lock fails to open when combination is entered and outside thumbturn is rotated clockwise.
- Buttons were not fully depressed when the combination was entered.
- Lock not cleared of previous attempts to enter combination.
- ☞ Turn the outside thumbturn to the left to clear the wrong entry. Enter the combination making sure you feel each button click to know that it was depressed fully. Turn thumbturn clockwise.
- ? Turning outside thumbturn clockwise always retracts latch without depressing any buttons.
- Lock is in zero combination.
- ☞ Follow the procedure for setting a new combination (Section J, but omit Step J-2).
- ? Inside thumbturn only retracts bolt partially or not at all, in either clockwise or counterclockwise direction.
- Bolt was not properly installed.
- ☞ Remove and re-install the bolt. Review and follow instructions in Section E.
- ? After setting a new combination, the lock works one time only, then fails to open.
- Buttons of intended combination were not fully depressed when changing combination.
- ☞ This is a lost combination situation. Review and follow instructions in Section K.



Kaba Access Control

2941 Indiana Avenue

Winston-Salem, NC 27105 USA

Tel: 800.849.8324 or 336.725.1331

Fax: 800.346.9640 or 336.725.3269

www.kabaaccess.com

PKG2389 0810